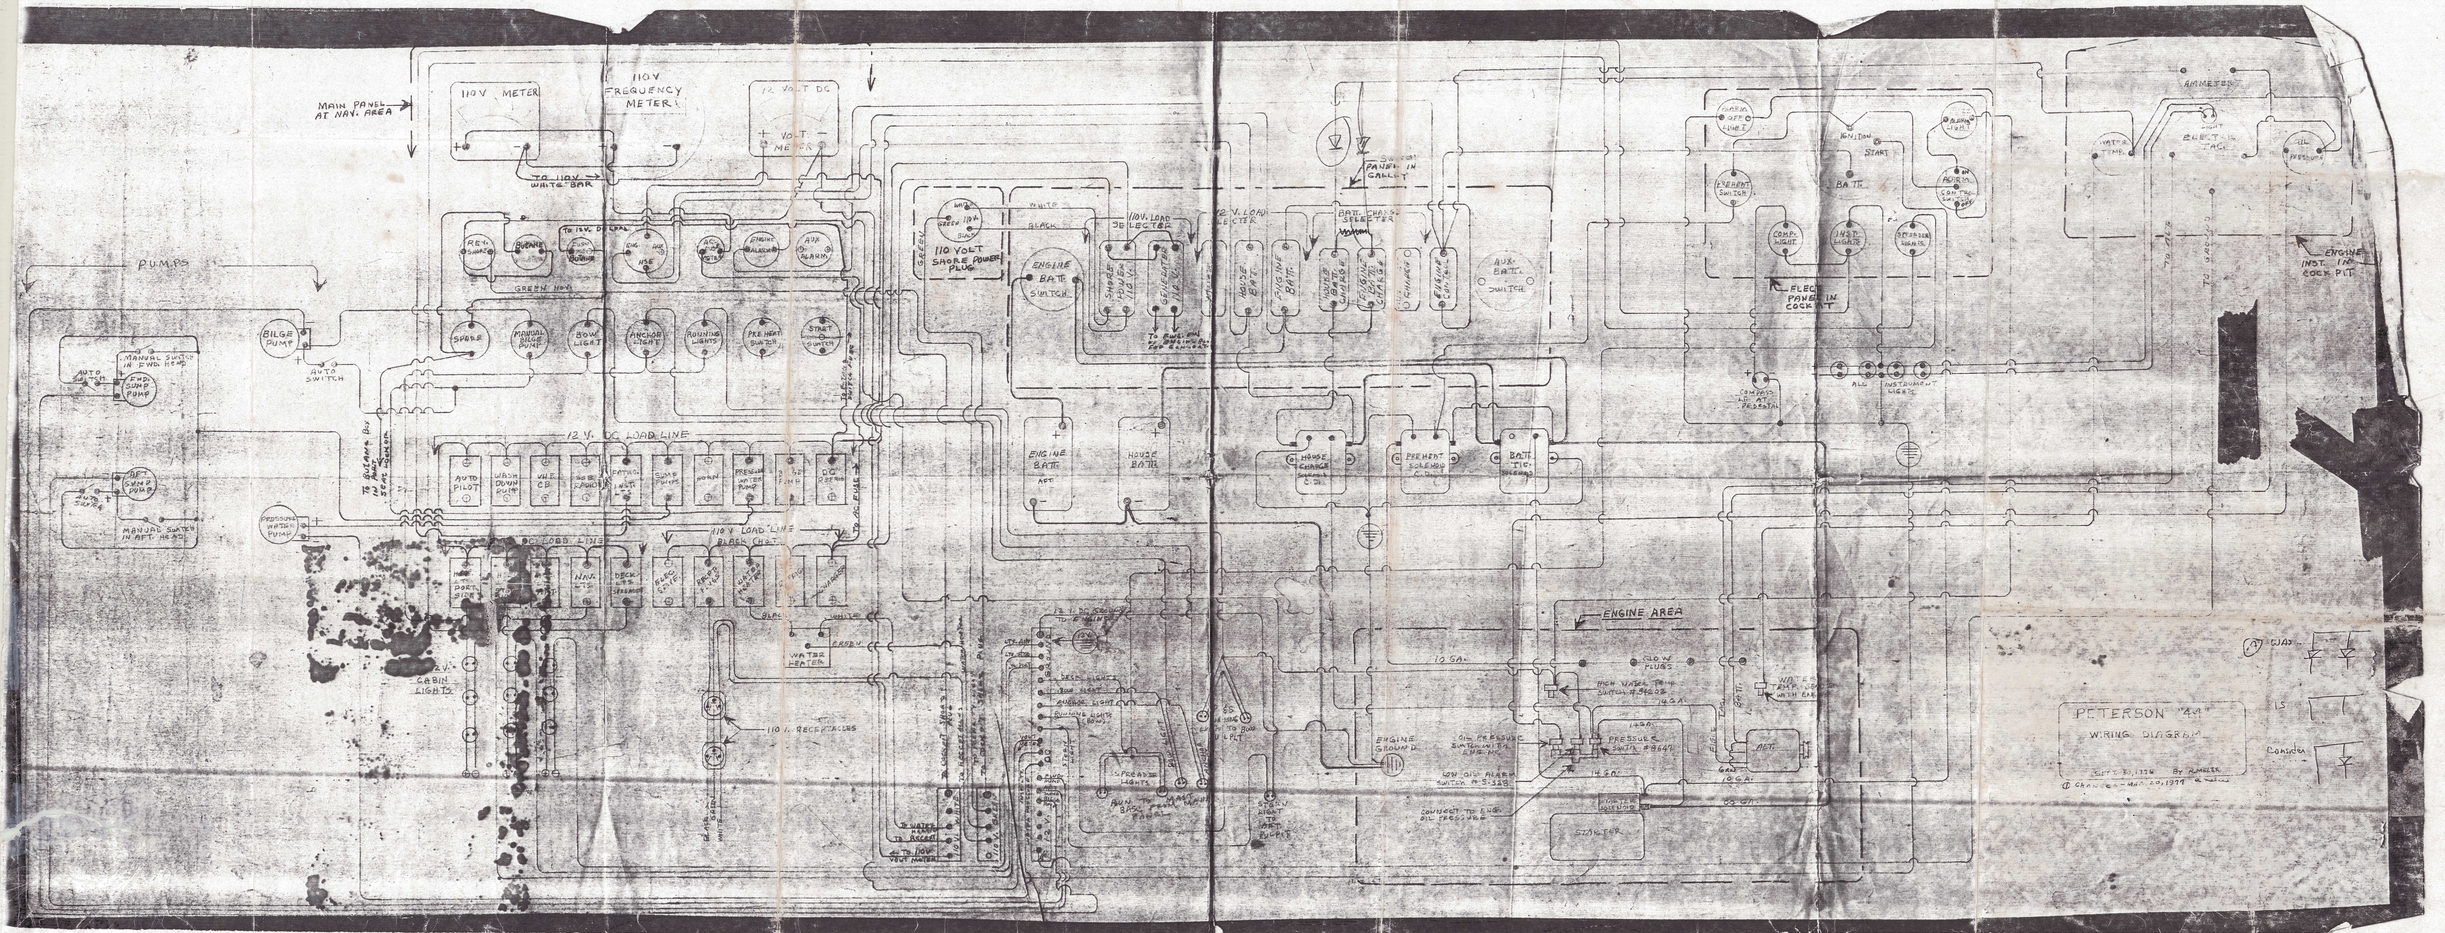
MAIN PANEL AT NAV. AREA
110V METER
110V FREQUENCY METER
12 VOLT DC
TO 110V WHITE BAR
PUMPS
BILGE PUMP
AUTO SWITCH
MANUAL SWITCH IN FWD HEAD
FWD SUMP PUMP
AFT SUMP PUMP
MANUAL SWITCH IN AFT HEAD
PRESSURE WATER PUMP
SPARE
MANUAL BILGE PUMP
BOW LIGHT
ANCHOR LIGHT
RUNNING LIGHTS
PRE HEAT SWITCH
START SOLENOID
GREEN WIRE
12 V. DC LOAD LINE
AUTO PILOT
WASH DOWN PUMP
VALVE CB
SPARE CB
SPARE
HORN
PRESSURE WATER PUMP
SPARE
CB
110 V. LOAD LINE
BLACK WHITE
HOT WATER HEATER
NAV. LTS.
DECK LTS.
ELECTRIC HEAD
FRIG. CB
WATER HEATER
CABIN LIGHTS
110 V. RECEPTACLES
110V LOAD SELECTOR
110 VOLT SHORE POWER PLUG
ENGINE BATT. SWITCH
SHORE 110 VOLT CHARGER
GEN. 110 VOLT
ENGINE BATT.
HOUSE BATT.
12 V. LOAD SELECTOR
BATT. CHARGE SELECTOR
ALTERNATOR CHARGE
BATT. CHARGE SELECTOR
AUX. BATT. SWITCH
ENGINE BATT.
HOUSE BATT.
HOUSE CHARGE
PREHEAT SOLENOID
BATT. TIE SOLENOID
ENGINE AREA
GLOW PLUGS
HIGH WATER TEMP SWITCH #56203
14 GA
16GA
PRESSURE SWITCH #8641
14 GA
NET
WATER TEMP. GAUGE WITH SENDER
ENGINE GROUND
OIL PRESSURE SWITCH #8641
LOW OIL ALARM Switch #3-328
CONNECT TO ENG. OIL PRESSURE
ALTERNATOR
ENGINE INST. PANEL IN COCKPIT
COMPASS LT. PEDESTAL
INSTRUMENT LIGHTS
ALT
COMP. LIGHT
INST. LIGHTS
ENGINE INST. LIGHTS
ENGINE OFF LIGHT
IGNITION OR START
BATT.
ALARM LIGHT
SAN. TANK SW. LIGHT
WATER TEMP.
OIL PRESSURE
AMMETER
ELECTRIC JACK
TO ENGINE INST. PANEL
PETERSON "44"
WIRING DIAGRAM
SEPT. 1, 1974 By RAMEER
© CHANGE — MAY 20, 1979 © WIRE